




Resetting LinuxCNC

Linux RESET Program


RESET BUTTON:

As for the reset button, there isn't one. Do the following to reset your program back to the beginning:


1. Click on "Pause" to stop your program from running.

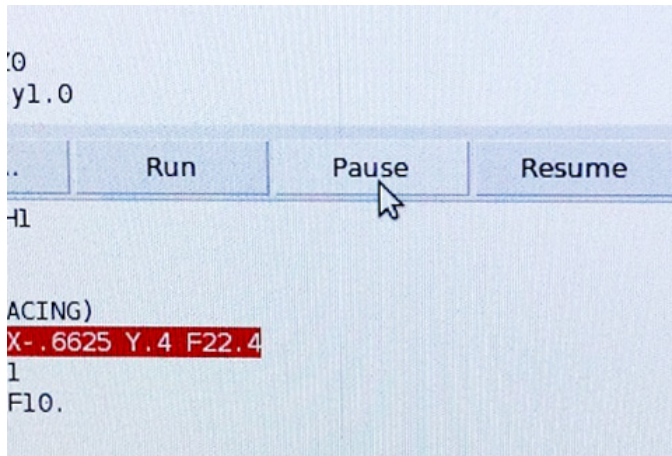

2. Click on "File," and then click on "Save and Load."

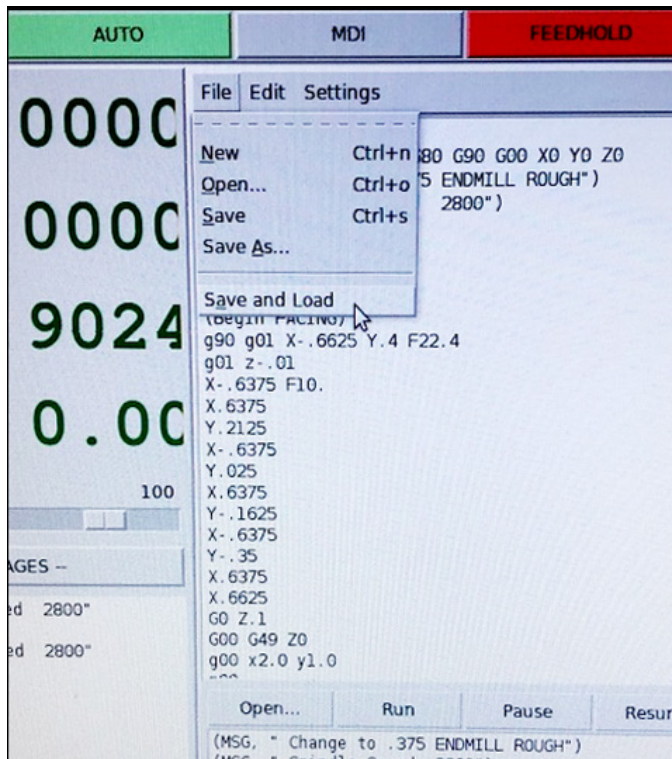

3. You will get the "interpreter" message. Click "OK" and then click on "Run" to restart your program.

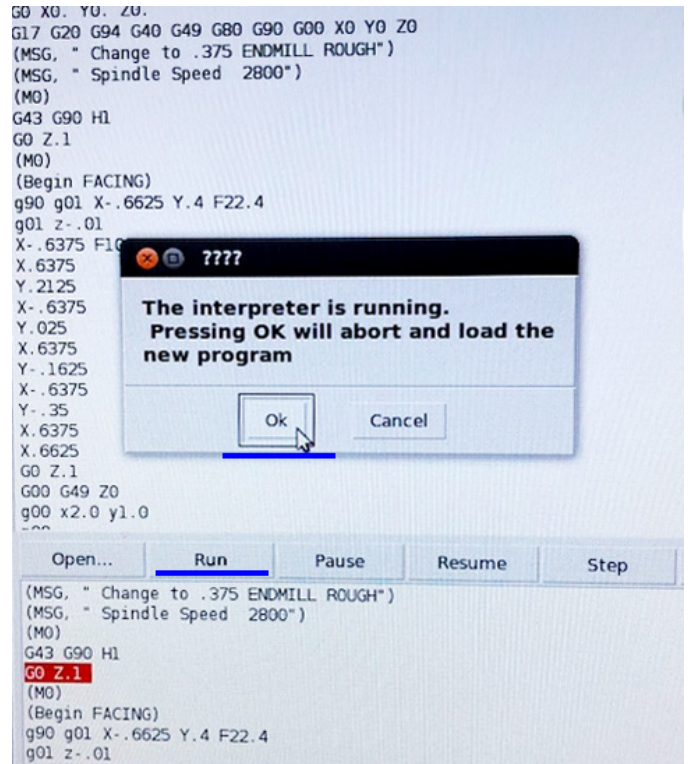

Thank you,
Sherline Products Inc.