



## Installing the spring on the Sensitive Drill

1. Use a coat hanger or thin piece for stiff wire and bend a hook in the end of it.




2. Hook the end of the wire onto the loop on the end of the spring.



3. Place the brass tube over the wire and spring.



4. Push the brass tube down into place on the body while keeping tension on the spring with the wire.

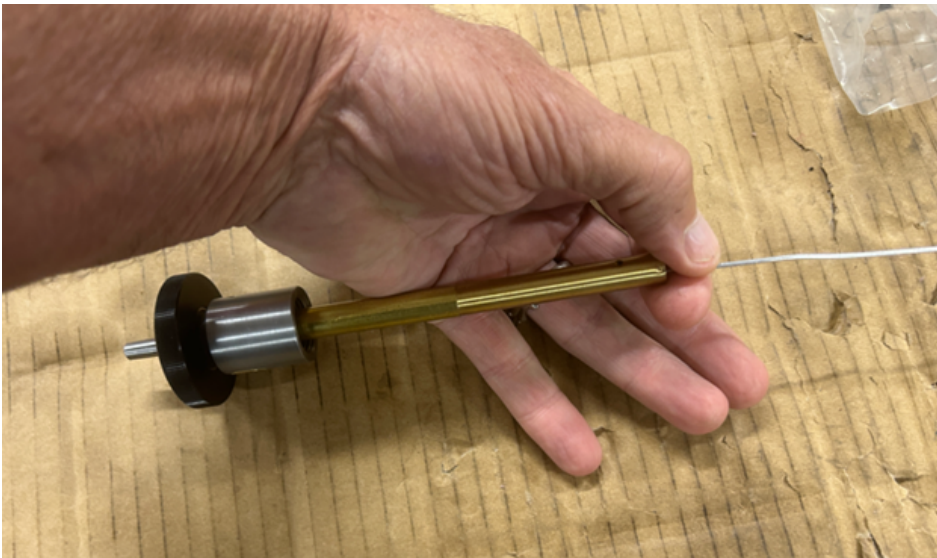

5. Pull the spring out of the end of the tube.



6. Hold the spring above the end of the tube so the loop on the end of the spring is accessible.





---

7. Hook the bent end of the cap into the loop on the end of the spring.



8. Push the cap into the end of the tube.

